



Hyperion **M** Munitions

PTC Grip Screw Instructions

1. The internal set screw comes with a thread locker pre-applied but for best results remove the internal screw and apply an additional thread locker and reinstall the set screw inside the large screw. Make sure to screw down the internal screw all the way in so that the tip just protrudes.
2. Remove the factory grip screw and lock washer from the grip of your rifle. Mind the spring and detent for the safety as they may bounce out if you remove the grip completely.
3. With the hammer cocked and the gun on safe, insert the Trigger Adjustment Screw into the grip and tighten the large screw with a 3/16" hex wrench until the pistol grip is secure.
4. Using a 5/64" hex wrench, finger tighten the internal screw inside the 3/16" screw until the it stops. **DO NOT OVER-TIGHTEN**. Back out the internal screw 1/4 turn at a time until the safety lever can be actuated. Verify that the trigger, disconnecter, hammer, and safety function correctly. Let your additional thread locker dry before putting your rifle to use.